



Storytime Trail

MOVED BY STORIES

Tech Sheet:

About the signs,
H-Frames, installation
and maintenance.

FAQ's about sign design
to make your Storytime Trail
easy to implement !

Storytime Trail book set signs are 29.5 x 23.5 inches.




The signs have been designed to maximize the text and visual impact of each book. Typically, two pages are presented within a book form.

Sign boxes.

Signs are packed into 30 x 24 x 5 inch cardboard boxes.


Please check to verify you have received a complete set of signs.

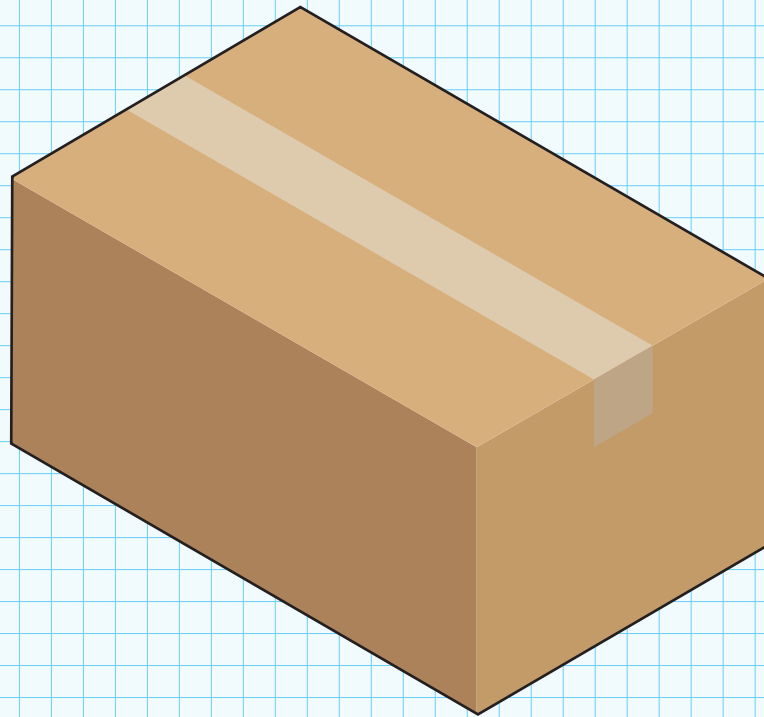

H-Frame boxes.

H-Frames are packed into 32 x 10 x 8 inch cardboard boxes. As each sign requires two, 10 x 30 inches H-Frames you can expect to receive two frames per sign.

Please check to verify you have received a complete set of H-Frames.

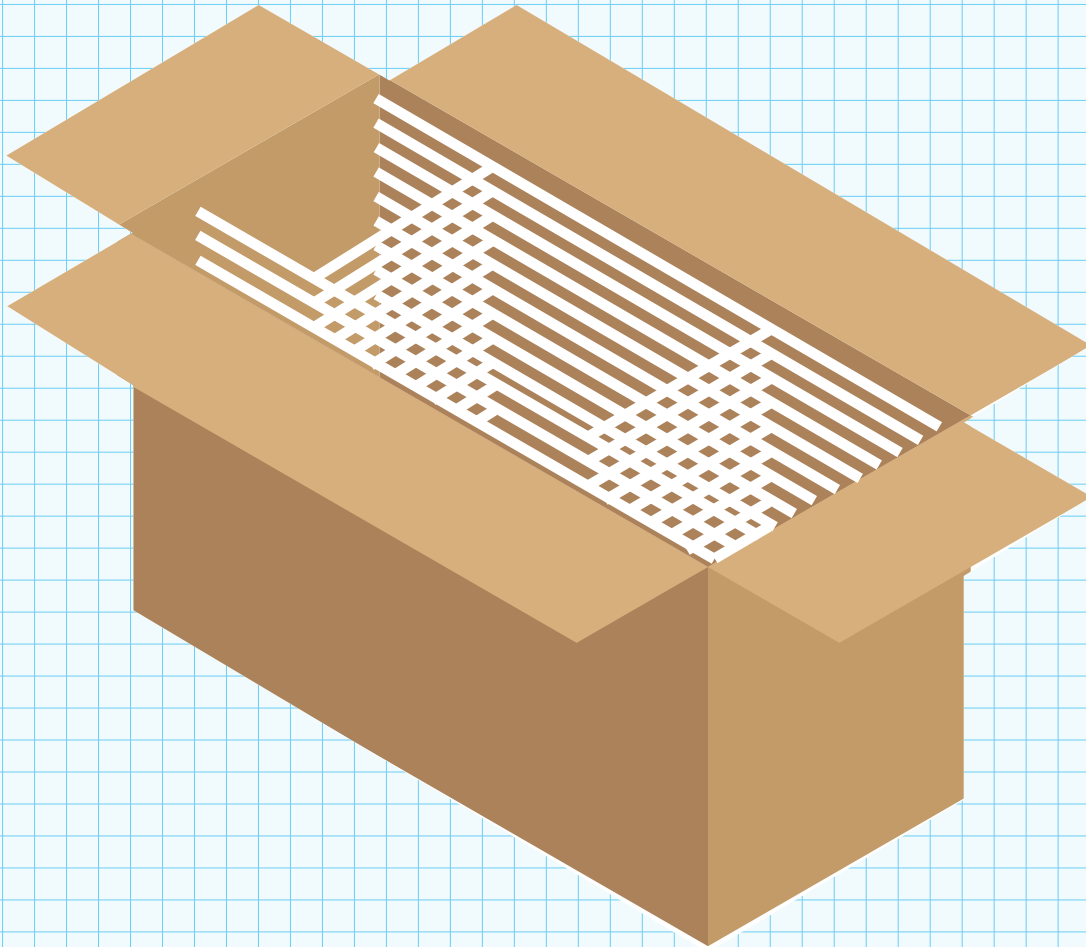


Combining signs and H-Frames.

Correctly installing and removing signs will help prevent damage and increase the life of your signs. Here are a few helpful tips.

Before putting a sign into the ground, carefully guide two H-Frames into the channels of the Coroplast panel as shown.

The upper section of the H-Frame is about 8 inches long.

For maximum stability, the bottom of the sign should touch the upper crossbeam of the H-Frame.

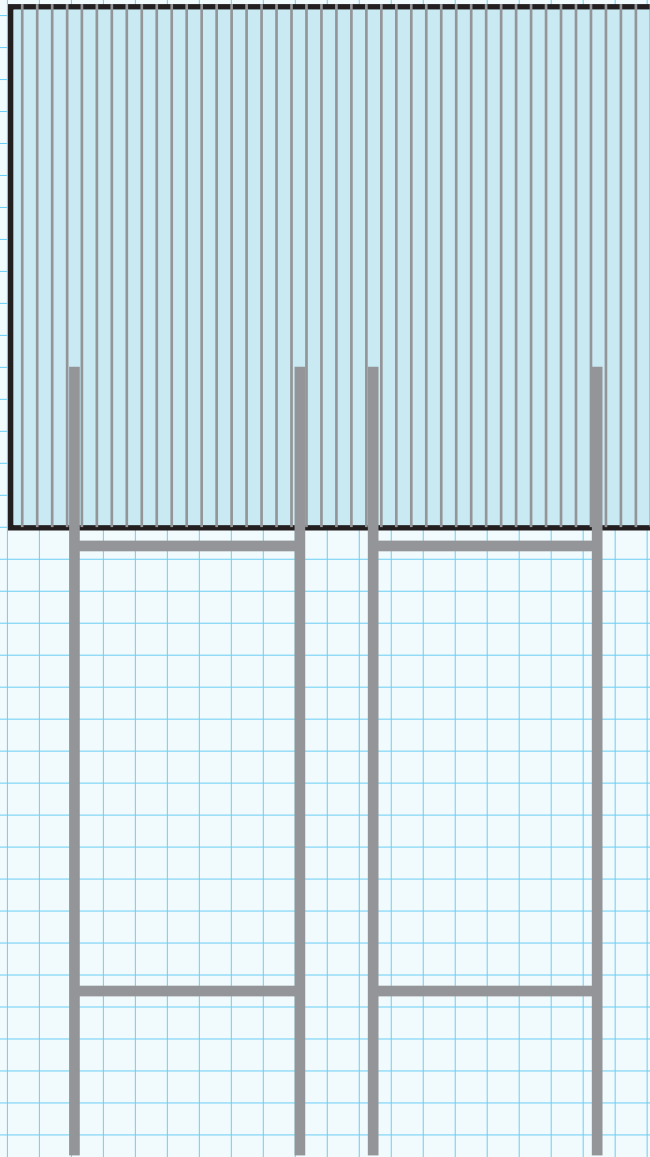

The right sign height.

The top of a sign should be about 3 feet above ground.



Installing your signs.

Carefully apply pressure to the horizontal crossbar using your hands or feet, while alternating from side to side.



It's not necessary that the lower crossbar rest on the ground. A gap of a few inches is OK.

Wipe away dirt and moisture to prevent stakes from rusting.

When removing signs: extract gently upwards to avoid bending metal stakes.